

Technaxx® * User Manual

Technaxx® * Operating instructions

Lifenaxx pedestal fan with LED light LX-079



Before using the appliance for the first time, please read the instructions for use and safety information carefully.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or by persons lacking in experience or knowledge, unless they are supervised or instructed on the use of this device by a person responsible for their safety. Children should be supervised to ensure they do not play with this device.

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

Enjoy your product. * Share your experience and opinion on one of the well-known internet portals.

Specifications are subject to change without notice - please be sure to use the latest manual available on the manufacturer's website.

Table of Contents

Danger!.....	2	Care and maintenance	6
Hints	2	Replace the Battery on remote	
Safety instructions	2	Control.....	6
Warnings	4	Change Hepa Filter	7
Disclaimer.....	4	Troubleshooting.....	7
Key Operations.....	5	Support.....	7
Product overview.....	5	Declaration of Conformity.....	8
Technical Specifications.....	6	Disposal.....	8

Danger!

When using appliances, a number of safety precautions must be observed in order to prevent injury and damage. Read these operating instructions / safety instructions carefully. Keep these well so that the information is available to you at available to you at all times. If you hand over the appliance to other persons, hand over these operating these operating instructions / safety instructions with it. We accept no liability for accidents or damage caused by non-observance of these manual and the safety instructions.

Hints

- Only use the product for purposes due to its intended function
- Do not damage the product. Following cases may damage the product: Incorrect voltage, accidents (including liquid or moisture), misuse or abuse of the product, faulty or improper installation, mains supply problems including power spikes or lightning damage, infestation by insects, tampering or modification of the product by persons other than authorized service personnel, exposure to abnormally corrosive materials, insertion of foreign objects into the unit, used with accessories not preapproved.
- Refer to and heed all warnings and precautions in the user manual.

Safety instructions

- Danger! - Read the operating instructions to reduce the risk of injury
- Inspect the equipment and accessories for transport damage.
- The equipment and packaging material are not toys.
- Do not let children play with plastic bags, foils or small parts. There is a danger of swallowing or suffocating!
- Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be

voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

- The electric tool generates an electromagnetic field during operation. Under certain circumstances this field may actively or passively impede medical implants. To reduce the risk of serious or fatal injuries, we recommend people with medical implants to consult their doctor and the manufacturer of the medical implant prior to using the equipment.
- Keep all safety devices, air vents and the motor housing free of dirt and dust as far as possible. Wipe the equipment with a clean cloth
- Do not squeeze, collide or pull the power cord hard to avoid damage to electronic parts.
- Do not attempt to disassemble, it may result in short-circuit or even damage.
- Do not drop or shake, it may break internal circuit boards or mechanics.
- Do not expose to rain or moisture, dripping or splashing, to reduce the risk of fire or electrical shock.
- Keep the device in dry and ventilated environment, avoid high humidity/temperature.
- Do not install the device near any heat source (e.g. radiators, oven) and keep it away from direct sunlight.
- Keep the device away from little children.
- Never touch the product with wet or damp hands.
- The product can only be operated with the voltage described on the interior panel.
- To prevent a possible fire, do not use with any opening or exhaust blocked, and keep free of dust, lint, hair, and anything that may reduce airflow.
- Do not put any object into the inlet grille or the exhaust opening as this may cause an electric shock or fire, or damage the appliance.
- Do not use on soft surfaces, such as a bed, where openings may become blocked.
- In order to avoid overheating and fire hazard, do not cover appliance.
- For the best performance, place on the floor, in the corner of the room, at least 3 feet from any wall and facing into the center of the room.
- This fan may not work properly on an uneven surface. Always place this fan on a firm, level and water resistant surface.
- ALWAYS use with the supplied power plug.
- Failure to do so may cause electric shock or malfunction.
- Do not swing fan by handle. This may cause injury, damage fan or damage floor.
- Do not place fingers into the guard or any moving part of fan.
- Do not drag fan. It may cause damage to fan or floor.
- If fan malfunctions, stop using fan immediately and disconnect from power supply.
- Turn off all controls before unplugging or carrying out any maintenance.
- If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.

- **Choking Hazard:** This remote control unit contains a small battery. Keep the remote control away from children and do not swallow the battery. If the battery is swallowed, seek medical advice immediately.

 
- The cable is sheathed and insulates the current. Do not place any objects on the cable, as this could cause the protective function to be lost. Avoid placing excessive stress on the cable, especially at sockets and plugs.
- If you want to pull the plug out of the socket, always pull on the plug and not on the cable. The cable could otherwise break.
- Do not overload wall outlets, extension cords, or other wiring as this may result in fire or electric shock.
- Unplug the power cord from the power outlet for cleaning.
- Do not use liquid cleaners or cleaning sprays. The product may only be cleaned with a damp cloth.
- Do not connect any additional devices that are not recommended by the manufacturer.
- Do not use the product in direct sunlight or places where the temperature may exceed 50°C for a long time.

Warnings

- Do not disassemble the product, it may result in short-circuit or damage.
- Do not modify, repair or remove without professional guidance.
- Do not use corrosive or volatile liquid for cleaning.
- Do not drop or shake the device, it may break internal circuit boards or mechanics.


Disclaimer

- In no event shall Technaxx Deutschland be liable for any direct, indirect punitive, incidental, special consequential danger, to property or life, improper storage, whatsoever arising out of or connected with the use or misuse of their products.

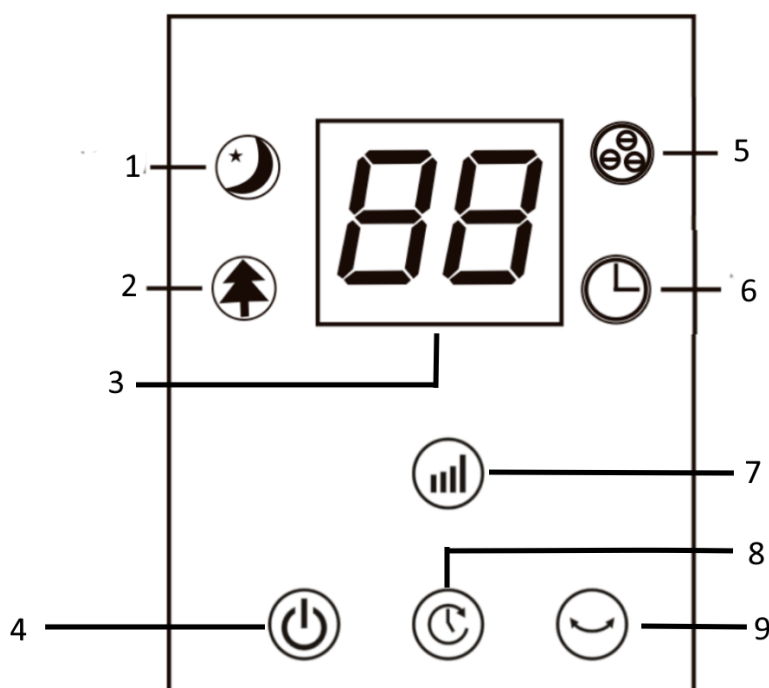

1	Sleep mode
2	Natural
3	Display
4	On/Off Button
5	Ion
6	Timer mode
7	Speed
8	Timer button
9	Oscillation button

 REMOTE CONTROL

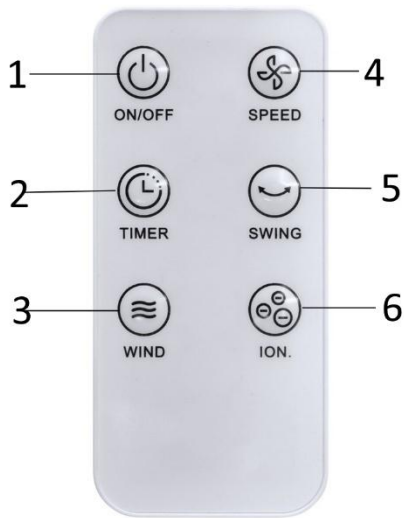

1	On/Off
2	Timer
3	Wind Mode
4	Speed level
5	Swing
6	Negative ion

Key Operations

Plug into wall outlet.

Power: Turn on unit by pressing ON/OFF (4) button on fan or (1) remote. Make sure the safety foil is removed from the battery of the remote control. The Fan starts with speed level 6.

 
Speed: Change the Air flow by pressing the speed button (7) on fan or (4) remote. 12 speed levels are available.

Rotate: The oscillation function can start by oscillation button (9) on fan or (5) remote.

Timer: Set the timer by pressing the timer button fan (8) or remote (2), 0-12h are available, each pressing to add 1 hour more.

Product overview

Main Unit

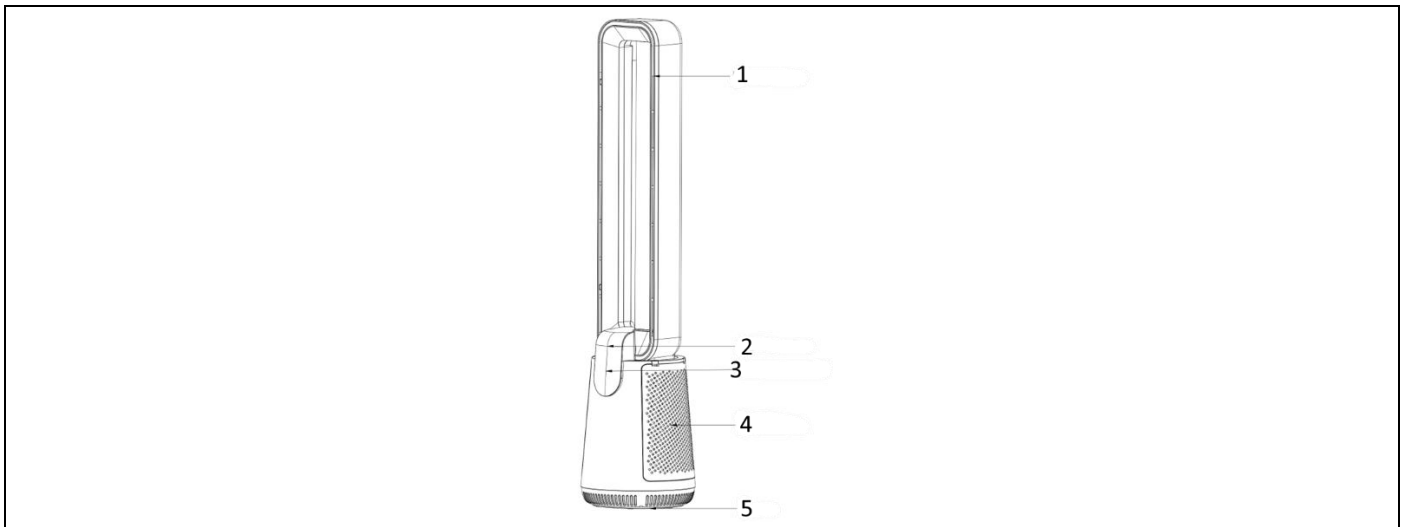

1	Air outlet	2	LED
3	Control Panel	4	Air inlet and Filter
5	Base		

Technical Specifications

Voltage	220-240V~, 50-60Hz
Power	27W
Package contents	1x Main Unit, 1x remote control including Batterie, 1x User Manual

Care and maintenance

Before cleaning the fan, please read the following:

- Always unplug the fan and disconnect from power before cleaning.
- Use only a soft, damp cloth to gently wipe the outer surfaces of the fan.
- Do not immerse the fan in water or other liquids and never allow water to drip on the motor housing.
- Do not use gasoline, paint thinner, or any other corrosive cleaning solutions to clean the fan.
- To clean between the grille, we recommend using a pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to gently remove dust.
- If the fan will not be in use for an extended period of time, you may leave the fan assembled. Cover to protect it from dust. Store in a cool, dry place.

Replace the Battery on remote Control



When the remote control stops operating or its range seems reduced, it is time to replace the battery with a new one.

The battery compartment is located on the back end of the remote.

Press and slide the battery door open and remove the old battery.

Insert a CR2025 battery, checking that the “+” and “-” terminals of the battery matches the inside of the battery compartment.

Replace the battery compartment door.

DO NOT mix old and new batteries.

DO NOT use rechargeable silver oxide cell batteries with remote control unit. DO NOT mix alkaline. Standard (Carbon-zinc). Or rechargeable (Nickel - Cadmium) batteries. DO NOT dispose of batteries in fire. Improper disposal may cause batteries to leak or explode.

Change Hepa Filter

The Fan has 2 Hepa filters, to change or clean them open the Air inlet (4) by pressing the 2 clips down gently. Remove the Air inlet and remove the Hepa filter from the base. You can use a compressor to gently clean the Hepa filter. Place the Hepa filter in the base and close the air inlet.

Troubleshooting

If the fan shuts off unexpectedly, safety features may be activated to prevent damage or injury. If this happens, check the following:

Is the fan plugged into a working electrical outlet? Plug into a wall outlet.

Is the fan powered ON? Press ON/OFF on fan or remote.

Has a household fuse blown, or has a circuit breaker tripped? Replace the fuse or reset the circuit breaker. If the problem continues, call an electrician.

Fan makes an unusual noise.

If this happens, do the following:

Reset the fan. Unplug the fan for 1 minute, then plug back in. If fan is still making unusual noise, unplug from the wall outlet and contact the Customer Service Center.

Unit has reduced air flow or increased noise:

The fan may be excessively dirty. Clean fan as needed. Refer to Cleaning the Fan.

Support

Service phone No. for technical support: **01805 012643** (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free

Email: **support@technaxx.de**

The support hotline is available Mon-Fri from 9am to 1pm & 2pm to 5pm

Declaration of Conformity



The EU Declaration of Conformity can be requested at the following address: www.technaxx.de/ (in the lower bar "Declaration of Conformity").

Disposal



Disposal of the packaging. Sort packaging materials by type upon disposal.

Dispose of cardboard and paperboard in the waste paper. Foils should be submitted for recyclables collection.



Disposing of old equipment (Applies in the European Union and other European countries with separate collection (collection of recyclable materials) Old equipment must not be disposed of with household waste! Every consumer is required by law to dispose of old devices that can no longer be used separately from household waste, e.g. at a collection point in his or her municipality or district. This ensures that the old devices are properly recycled and that negative effects on the environment are avoided. For this reason, electrical devices are marked with the symbol shown here.



Batteries and rechargeable batteries must not be disposed of in household waste! As a consumer, you are required by law to dispose of all batteries and rechargeable batteries, whether they contain harmful substances* or not, at a collection point in your community/city or with a retailer, to ensure that the batteries can be disposed of in an environmentally friendly manner. * marked with: Cd = cadmium, Hg = mercury, Pb = lead. Return your product to your collection point with the fully discharged battery installed inside!

Made in China

Distributed by:

Technaxx Deutschland GmbH & Co. KG
Konrad-Zuse-Ring 16-18,
61137 Schöneck, Germany

Bladeless Fan LX-079